

Water Filter (Model 9000 777508)

Failure to follow instructions will void warranty.

⚠ WARNING

- To reduce the risk of ingesting contaminants, do not use water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.

Exchanging the filter

CAUTION

To reduce the risk associated with property damage due to water leakage: The disposable filter cartridge must be replaced every six months, at the rated capacity, or if a noticeable reduction in flow rate occurs.

IMPORTANT NOTES

- After installing a new water filter always discard the ice production of the first 24 hours after switching on the icemaker.
- After changing the filter, always dispense water for at least 2.25 gallons (3 minutes) and throw water away.
- If ice has not been used for a prolonged time, discard all ice cubes in the bin and discard the ice production of the next 24 hours.
- If appliance or ice was not actively used for several weeks or months or ice cubes have an unpleasant taste or odor, change water filter.
- Air trapped in system may cause water and cartridge to eject. Use caution when removing.

If the following display is indicated:



The age of the filter is close the maximum life time (6 months). Order a new water filter.

To purchase a replacement water filter contact your local dealer or call 1-800-578-6890.

If the FILTER and 3 cells are blinking altogether :



The filter has to be changed immediately.

1. Pull the filter cover softly to open the cover halfway.
2. Rotate the filter cap on the base panel by 90° - 180° in a counter-clockwise direction.
3. Pull the used filter cartridge out of the appliance.
4. Remove the cap from the used filter.
Take a new filter cartridge out of the packaging and remove the protective cap.
5. Push the cap onto the filter cartridge.
6. Push the filter cartridge with the cap all the way into the opening carefully.
7. Rotate the filter cartridge by 90° - 180° gently in a clockwise direction until the cap is in a vertical position.
8. Push the filter back to close the cover.

After installing a new water filter always flush the filter for 2.25 gallons (approximately 3 minutes) and discard the ice production of the first 24 hours after switching on the icemaker.

After changing the filter, reset the filter display.

 
The appliance may be used without a water filter, provided a water filter substitute cartridge is used. **CAUTION:** Failure to use either a water filter or water filter substitute cartridge in your refrigerator may result in property damage due to water leakage. If you choose this option replace the water filter with a water filter substitute cartridge. In this case the filter display might be deactivated to prevent filter change messages. To purchase a water filter substitute cartridge contact your local dealer or call 1-800-578-6890.

Resetting the filter display

IMPORTANT: If the filter display is not reset, the next required filter change cannot be signalled by the display.

After each filter change:

Lock the buttons by pressing mute/lock button for 3 seconds, and then press light/filter button for 3 seconds.



Deactivating the filter display

The appliance might be used without a water filter. If you choose this option replace the water filter with a water filter substitute cartridge. In this case you can simply reset the filter display every 6 months to prevent filter change messages. To purchase a water filter substitute cartridge contact your local dealer or call 1-800-578-6890.

⚠ WARNING ⚠

- To reduce the risk of ingesting contaminants, do not use water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.

Performance Data Sheet

Model: 9000 777508, 9000 705475 and 9000 225170

Use Replacement Cartridge 9000 674655

The concentration of the indicated substances in water entering the system was reduced to a concentration less than or equal to the permissible limit for water leaving the system as specified in NSF/ANSI Standard 42 and Standard 53.

System tested and certified by NSF International against NSF/ANSI Standard 42 and Standard 53 for the reduction of the claims specified on the Performance Data Sheet.



Capacity 739.68 Gallons (2800 Liters)

Contaminant Reduction Determined by NSF testing.

Contaminant Reduction	Average Influent	NSF specified Challenge Concentration	Avg % Reduction	Average Product Water Concentration	Max Permissible Product Water Concentration	NSF Reduction Requirements	NSF Test Report
Chlorine Taste and Odor	2.1 mg/L	2.0 mg/L $\pm$ 10%	97.6%	0.05 mg/L	N/A	$\geq$ 50%	J-00121313
Nominal Particulate Class I, $\geq$ 0.5 to $<$ 1.0 μ m	9,100,000 pts/mL	At least 10,000 particles/mL	98.8%	111,817 pts/ml	N/A	$\geq$ 85%	J-00099871
Cyst*	170,000 cysts/L	Minimum 50,000 cysts/L	99.99%	0.001 cyst/L	N/A	$\geq$ 99.95%	J-00109715

* Based on the use of Cryptosporidium parvum oocysts

Application Guidelines/Water Supply Parameters	
Service Flow	0.75 gpm (2.83 lpm)
Water Supply	Potable Water
Water Pressure	30 - 120 psi (207 - 827 kPa)
Water Temperature	33° F - 100° F (0.6° C - 38° C)

It is essential that the manufacturer's recommended installation, maintenance and filter replacement requirements be carried out for the product to perform as advertised. See Installation Manual for Warranty information.

Note: While the testing was performed under standard laboratory conditions, actual performance may vary.

Replacement Cartridge: 9000 674655. For estimated costs of replacement elements please contact your local dealer or call 1-800-578-6890.

⚠ WARNING

To reduce the risk associated with ingestion of contaminants:

- ❑ Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before and after the system. Systems certified for cyst reduction may be used on disinfected water that may contain filterable cysts.

EPA Establishment Number 10350-MN-005

NOTICE

To reduce the risk associated with property damage due to water leakage or flooding:

- ❑ Read and follow all Instructions before installation and use of this system.
- To reduce the risk of water leakage or flooding, and to ensure optimal filter performance:
 - ❑ Change the disposable filter cartridge every six months or sooner if you observe a noticeable reduction in water flow rate.
 - ❑ Failure to replace the disposable filter cartridge at recommended intervals may lead to reduced filter performance and cracks in the filter housing, causing water leakage or flooding.